


## SHOWER WASTES INSTALLATION INSTRUCTIONS

1. Turn waste upside down and apply sealant to the underside of the flange. Do NOT use silicone or any other product which contains Linseed Oil, as this could cause leakages.
2. Insert waste and flange into shower and hold for a few moments to allow sealant to take hold.
3. Fit washer over thread of waste and tighten the nut. Do NOT overtighten.

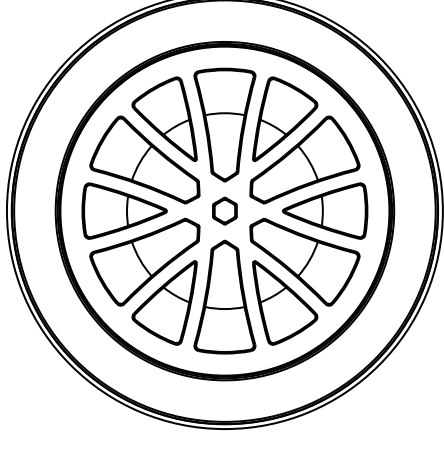

ID	FINISH	FINISH
11789	80x50	WHITE
11793	80x50	CHROME



MEASUREMENTS (MM):

